

### ! WARNING

 
THIS DEVICE CAN CAUSE PERSONAL INJURY! WEAR SAFETY GLASSES AT ALL TIMES AND KEEP FINGERS AWAY FROM SPINPLATE. FAILURE TO FOLLOW ALL SAFETY INSTRUCTIONS COULD RESULT IN INJURY.

#### Parts List

1. XDE Kit
2. 6V Lantern Battery (not included)

#### Accessories (not included)

1. Remote Activator
2. 6V Solar Power Panel

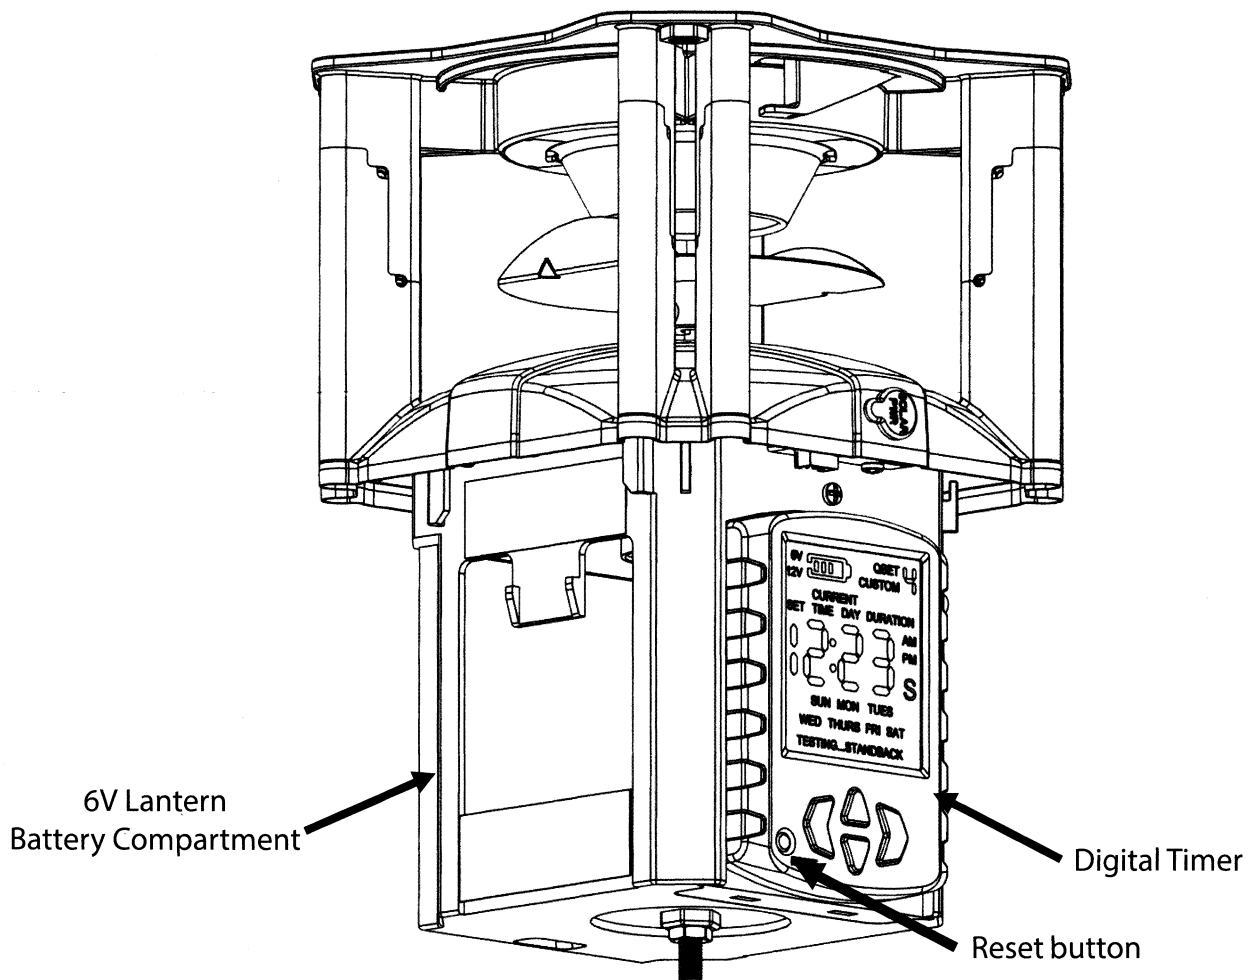

#### Spin Plate Adjustment

The Spin Plate may be raised or lowered to accommodate different feed sizes.

1. Rotate spin plate so Spin Plate adjustment screw is accessible.
2. Loosen screw and slide Spin Plate to desired height.
3. After height adjustment is complete, tighten screw to lock Spin Plate into place.

**WARNING: When using the American Hunter 6V Solar Power Panel or an external battery, remove the internal battery from the XDE. Failure to remove this battery could cause damage to the batteries and the timer.**

## Digital Timer Instructions

Digital Timer Quick Set Modes			
	Time	Days	Length
QSET 1	6:30 AM   6:30 PM	ALL	3 sec
QSET 2	6:30 AM   6:30 PM	ALL	5 sec

Please read all instructions before attempting to set the clock

### Clock Program

1. From home screen, press right arrow to display "CURRENT TIME" screen
2. Press right arrow again to display "SET CURRENT TIME" screen
3. Adjust hour with up and down buttons. Press right when complete.
4. Adjust minute with up and down buttons. Press Right when complete.
5. Adjust day with up and down buttons. Press Right when complete.
6. Press the left arrow to return to the home screen

### Operation Program (Custom Setting 1)

1. On main screen, use up and down arrows to change operation mode between QSET 1 | QSET 2 | CUSTOM
2. When in CUSTOM mode, press left arrow to enter Custom Timer Programming
3. Press the Left button to enter the timer viewing screen. A number will appear in the upper right corner, indicating which timer is being viewed.
4. Press the Right button to enter the timer programming screen
5. Adjust feed day with up and down buttons. Press right when complete.
6. Adjust feed time hours with up and down buttons. Press Right when complete.
7. Adjust feed time minutes with up and down buttons. Press Right when complete.
8. Adjust feed duration with up and down buttons. Press Right when complete.
9. Press Left to return to the main screen.

**NOTE:** To set the feeder to operate at the same time every day of the week, it is only necessary to set 1 program cycle for that time of day. Cycle through the options in the "DAYS" setting until they are all displayed

### Operation Program (Custom Setting 2-16)

1. Follow steps 1 through 3 above to enter Operation Programming.
2. Press Up or down to navigate through the program cycles to the desired cycle.
3. Repeat steps 4 through 9 above to set program 2-16. When all desired programs have been set, wait 5 seconds and timer will return to current time and day display.

### Cancel Program feed time

To cancel a custom feed time, navigate to the "Day" adjustment. The option to disable a specific time is located just before the Sunday setting. Press the Up or Down arrow to navigate to the OFF setting and select it to disable this custom time.

### Timer Reset

Press recessed button and all program cycle settings will be reset.

### Test


 


1. Press and hold Right arrow to activate test. USE CAUTION! There is a 5 second delay and the test will begin.
2. Press the Left arrow during the timer countdown to cancel the test.

**NOTE:** If for any reason you need to turn off the timer to reboot the clock, you need to wait for at least 20 seconds before turning the clock back on. Failure to do so may result in clock failure.

**WARNING: If the feeder becomes clogged, the motor will stop and try to dislodge the blockage 3 times. If this is unsuccessful, the message FFF will appear on the screen. To remove this message, press the left button**

### Troubleshooting

Should the feeder become non-responsive, and the screen does not turn on when buttons are pressed, press and hold the RESET button to clear the non-responsive state.

Parts List			
1	Hex Nut		4 pcs
2	Hex Bolt		4 pcs
3	Flat Washer		4 pcs
4	Self-Tapping Screw		4 pcs

### LIMITED WARRANTY INFORMATION

 
Boss Buck / American Hunter products are covered by a **90-Days Limited Warranty**

For warranty information please visit  
<https://www.bossbuck.com/return-warranty-policy/>

or scan the QR code below.



### FCC COMPLIANCE



**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

Product specifications are subject to change. Good Sportsman Marketing, LLC is not responsible for any photographic or typographical errors.

May be protected by one or more U.S. Patent numbers: 6,735,387 / 6,768,868 / 6,834,162 / 7,149,422 / 7,308,196 / 7,593,632 / 7,710,457 / 8,895,926.

#### Contact Us

Phone: 1.877.269.8490

Website: [www.gsmoutdoors.com](http://www.gsmoutdoors.com)

#### GSM, LLC

P.O. Box 535189

Grand Prairie, TX 75053-9504